

# СПИСОК УЗЛОВ ДЛЯ ARCTIC CAT TZ1


//OEM.MOTO-ALL.RU/ ТЕЛ.: +7 (495) 177-12-75

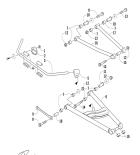


A-arm and sway bar assembly

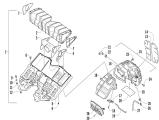


Air silencer assembly

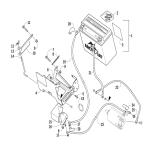

Battery and tray assembly

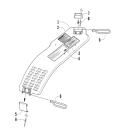


Belt guard assembly

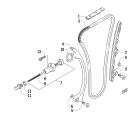


Cam chain assembly



Camshaft\_valve assembly

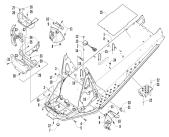


Chassis assembly

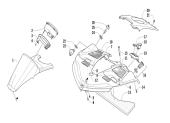


#### Console assembly



 
## Cooling assembly




#### Crank balancer assembly

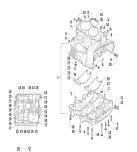


## Crankcase assembly

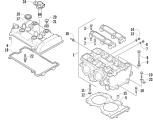


### Cylinder head assembly

 

#### Drive clutch

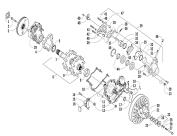


Drive train shaft and brake assemblies

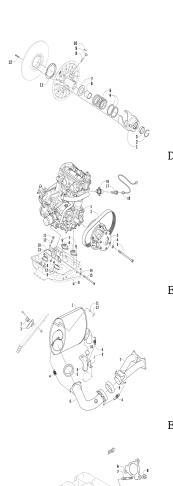


Driven clutch

 Engine and related parts







 $Exhaust\ manifold\ gasket\_intake\ flange\ assembly$ 

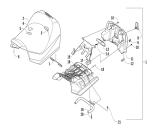


Front seat assembly

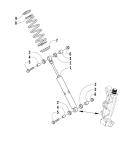

 
Front suspension shock absorber assembly




Fuel pump assembly

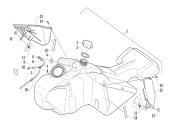


Gas tank assembly

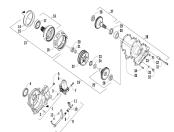

Gearcase assembly

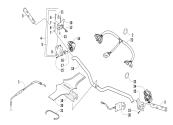


Handlebar and controls

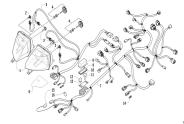


Headlight and wiring assemblies



 
Hood windshield and front bumper assembly




Hydraulic brake control assembly

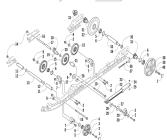


Idler wheel assembly

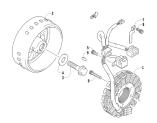


Magneto assembly

 


Magneto cover

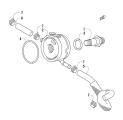


Oil cooler assembly

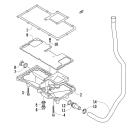


Oil pan assembly

 


Oil pump assembly

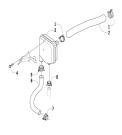


Oil separator assembly

 


Oil tank assembly

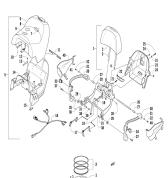


Passenger seat and backrest assembly

 


Piston and crankshaft assembly

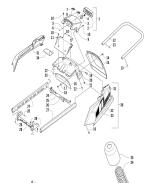


Rear bumper rack rail snowflap and taillight assembly

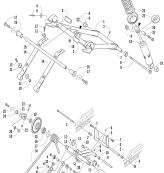


Rear suspension front arm assembly

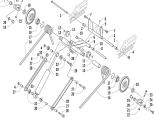


Rear suspension rear arm assembly

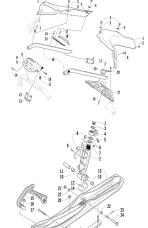


Seat support assembly

 

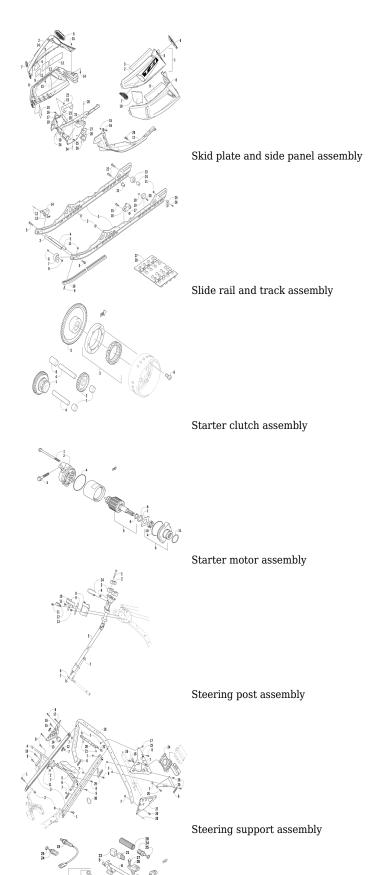

Throttle body assembly

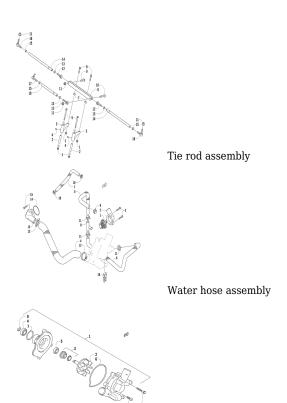

Water pump assembly